

## INSPECTION

1. REMOVE ENGINE ECU
2. INSPECT ENGINE ECU ([See page DI-23](#))
3. REINSTALL ENGINE ECU