


REPLACEMENT

1. REMOVE AIR CLEANER INLET
2. REMOVE AIR CLEANER ASSEMBLY
3. REMOVE NO.2 CYLINDER HEAD COVER

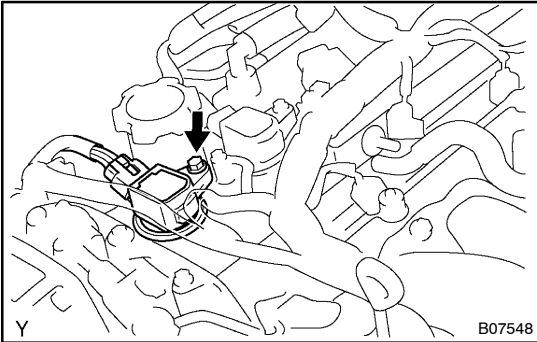

4. REMOVE IGNITION COILS FROM SPARK PLUGS
 - (a) Disconnect the ignition coil connectors.
 - (b) Remove the bolt, and pull out the ignition coil. Remove the 6 ignition coils.
5. REINSTALL NEW IGNITION COILS
 - (a) Connect a new ignition coil to the spark plug, and attach the ignition coil to the cylinder head cover, and install the bolt. Install the 6 ignition coils.
Torque: 7.5 N·m (80 kgf·cm, 66 in·lbf)
 - (b) Connect the 6 ignition coil connectors.
6. REINSTALL NO.2 CYLINDER HEAD COVER
7. REINSTALL AIR CLEANER ASSEMBLY
8. REINSTALL AIR CLEANER INLET