


REPLACEMENT

1. REMOVE NO.2 ENGINE UNDER COVER
2. REMOVE OIL DIPSTICK AND GUIDE FOR A/T
3. REMOVE STARTER (See page ST-3)

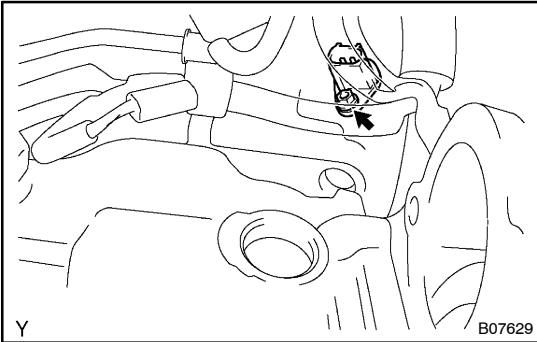

4. REMOVE CAMSHAFT POSITION SENSOR
 - (a) Disconnect the camshaft position sensor connector.
 - (b) Remove the bolt and camshaft position sensor.
5. REINSTALL CAMSHAFT POSITION SENSOR
 - (a) Install the camshaft position sensor with the bolt.
Torque: 9.0 N·m (90 kgf·cm, 80 in·lbf)
 - (b) Connect the camshaft position sensor connector.
6. REINSTALL STARTER (See page ST-17)
7. REINSTALL OIL DIPSTICK AND GUIDE FOR A/T
8. REINSTALL NO.2 ENGINE UNDER COVER