
LU03S-04

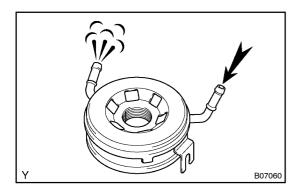

## INSPECTION

## **INSPECT OIL COOLER**

Check the oil cooler for damage or clogging. If necessary, replace the oil cooler.