


REPLACEMENT

IF NECESSARY, REPLACE FRONT BEARING RETAINER OIL SEAL

(a) Using a screwdriver, pry out the oil seal.

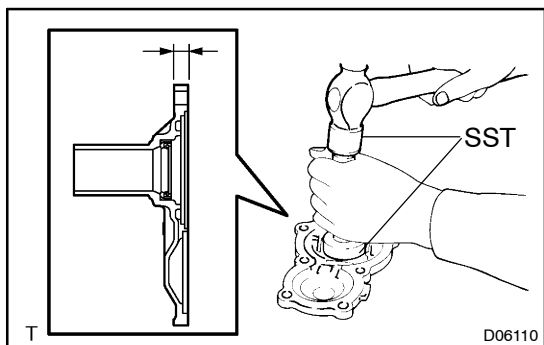

(b) Using SST and a press, install the new oil seal.
SST 09950-60010 (09951-00420), 09950-70010
(09951-07100)

Drive in depth: 11.5 ± 0.4 mm (0.453 ± 0.016 in.)