



## REPLACEMENT

1. DRAIN TRANSMISSION OIL
2. REMOVE PROPELLER SHAFT (See page PR-4)

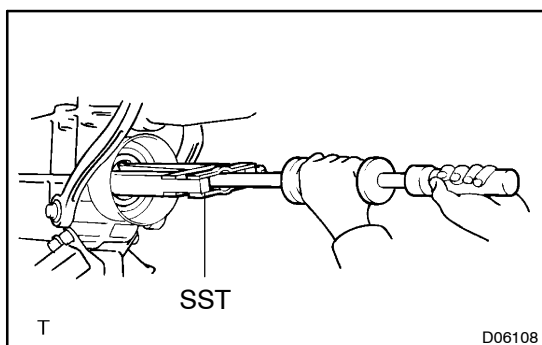

3. REMOVE EXTENSION HOUSING OIL SEAL
- Using SST, pull out the extension housing oil seal.  
SST 09308-00010

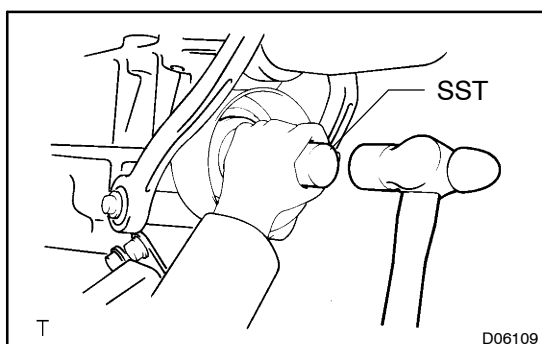

4. INSTALL NEW EXTENSION HOUSING OIL SEAL
- (a) Coat MP grease to tip of new oil seal.  
(b) Using SST and a hammer, install the new oil seal.  
SST 09325-20010
5. INSTALL PROPELLER SHAFT (See page PR-10)
  6. FILL WITH TRANSMISSION OIL