 


 

 
 



AUTOMATIC TRANSMISSION

SST (Special Service Tools)

PP23V-01

| | | |
|---|---|----------------------------------|
|  | 09308-00010 Oil Seal Puller | Extension housing oil seal |
|  | 09325-20010 Transmission Oil Plug | Extension housing oil seal |
|  | 09350-30020 TOYOTA Automatic Transmission Tool Set | |
|  | (09351-32020) Stator Stopper | Torque converter and drive plate |
|  | 09843-18040 Diagnosis Check Wire No.2 | |
|  | 09992-00095 Automatic Transmission Oil Pressure Gauge Set | |
|  | (09992-00231) Adaptor C | |
|  | (09992-00271) Gauge Assy | |