SUSPENSION AND AXLE

SST (Special Service Tools)

PP242-01

09223–00010 Cover & Seal Replacer Rear differential 09223–15020 Oil Seal & Bearing Replacer Rear axle 09308–00010 Oil Seal Puller Front axle Rear differential 09308–10010 Oil Seal Puller Rear differential 09309–36010 Transmission Rear Bearing Replacer Rear differential
09308–00010 Oil Seal Puller Front axle Rear differential 09308–10010 Oil Seal Puller Rear differential 09309–36010 Transmission Rear Bearing Replacer Rear drive shaft 09316–12010 Transfer Bearing Replacer Rear differential
09308–10010 Oil Seal Puller Rear differential 09309–36010 Transmission Rear Bearing Replacer 09316–12010 Transfer Bearing Replacer Rear differential
09309–36010 Transmission Rear Bearing Replacer Replacer 09316–12010 Transfer Bearing Replacer Rear drive shaft Rear drive shaft
Replacer 09316–12010 Transfer Bearing Replacer Rear differential
2001 C COOL Transmission & Transfer Position
09316-60011 Transmission & Transfer Bearing Replacer
(09316-00011) Replacer Pipe
(09316–00071) Replacer "F"
09330-00021 Companion Flange Holding Tool Rear differential
09502-12010 Differential Bearing Replacer Rear drive shaft
09502-24010 Bearing Replacer Front axle

	09504-22011	Differential Side Bearing Replacer	Rear differential
	09506-30012	Differential Drive Pinion Rear Bearing Cone Replacer	Rear differential
	09520-24010	Differential Side Gear Shaft Puller	Rear differential
	09527-17011	Rear Axle Shaft Bearing Remover	Rear axle
	09554-22010	Differential Oil Seal Replacer	Rear differential
	09554-30011	Differential Oil Seal Replacer	Rear differential
	09556-22010	Drive Pinion Front Bearing Remover	Rear differential
	09570-24010	Differential Mounting Cushion Remover & Replacer	Rear differential
0	09608-16042	Front Hub Bearing Adjusting Tool	Rear drive shaft
	(09608-02021)	Bolt & Nut	
0	(09608-02041)	Retainer	
	09608-32010	Steering Knuckle Oil Seal Replacer	Front axle
	09610-20012	Pitman Arm Puller	Front axle Front suspension Rear axle Rear suspension

	09628-10011	Ball Joint Puller	Front axle Rear axle
	09628-62011	Ball Joint Puller	Front suspension Rear axle Rear suspension
	09710-04081	Base	Rear differential
	09727–30021	Coil Spring Compressor	Front suspension Rear suspension
	(09727-00010)	Bolt Set	
	(09727-00021)	Arm Set	
	(09727-00031)	Compressor	
01.23	09950-00020	Bearing Remover	Front axle Rear axle Rear differential
	09950-30011	Puller A Set	Rear differential
	(09951-03010)	Upper Plate	
	(09953-03010)	Center Bolt	
0.00	(09954-03010)	Arm	
	(09955-03030)	Lower Plate 130	

			
	(09956-03020)	Adapter 18	
	09950-40011	Puller B Set	
	(09951-04020)	Hanger 200	Front axle Rear axle Rear differential
	(09952-04010)	Slide Arm	Front axle Rear axle Rear differential
	(09953-04020)	Center Bolt 150	Front axle
6.11	(09953-04030)	Center Bolt 200	Front axle Rear axle Rear differential
	(09954-04010)	Arm 25	Front axle Rear axle Rear differential
	(09955-04051)	Claw No.5	Front axle Rear axle
	(09955-04061)	Claw No.6	Rear differential
8	(09957-04010)	Attachment	Front axle Rear axle Rear differential
	(09958-04011)	Holder	Front axle Rear axle Rear differential
	09950-50012	Puller C Set	
	(09952-05010)	Slide Arm	Front axle Rear axle Rear differential

	(09954-05020)	Claw No.2	Rear axle
	(09954-05030)	Claw No.3	Front axle Rear differential
	(09955-05040)	Adapter No.4	Front axle Rear axle Rear differential
Second P	09950-60010	Replacer Set	
9	(09951-00400)	Replacer 40	Rear differential
9	(09951-00480)	Replacer 48	Rear axle Rear differential
6	(09951-00560)	Replacer 56	Front axle
6	(09951-00600)	Replacer 60	Rear differential
6	(09951-00650)	Replacer 65	Rear axle
0000	09950-60020	Replacer Set No.2	
6	(09951-00710)	Replacer 71	Front axle Rear differential
6	(09951-00750)	Replacer 75	Rear axle
(a)	(09951-00790)	Replacer 79	Rear differential

(09951-01030) Replacer 103	Rear axle
09950–70010 Handle Set	
(09951-07100) Handle 100	Rear axle Rear differential
(09951-07150) Handle 150	Front axle Rear differential
(09951-07200) Handle 200	Rear differential