 

 
 
 

 
 
 

 
 
 
 
 

 
 

 
 
 
 
 
 


 
 
 
 
 
 
 
 





STEERING**SST (Special Service Tools)**

PP23T-01





 
 




 
 
 
	09316-60011	Transmission & Transfer Bearing Replacer	Tilt steering column
	(09316-00051)	Replacer "D"	
	09612-00012	Rack & Pinion Steering Rack Housing Stand	PS gear
	09612-22011	Tilt Handle Bearing Replacer	Tilt steering column
	09616-00010	Steering Worm Bearing Adjusting Socket	PS gear
	09630-24014	Steering Rack Oil Seal Tool Set	PS gear
	(09620-24051)	Seal Ring Tool	
	09631-12071	Steering Rack Oil Seal Test Tool	PS gear
	09631-20060	Bearing Guide Nut Wrench	PS gear
	09631-20081	Seal Ring Tool	PS gear
	09631-20090	Cylinder End Stopper Nut Wrench	PS gear
	09631-22020	Power Steering Hose Nut 14 x 17 mm Wrench Set	PS gear

PREPARATION - STEERING

	09631-33010	Steering Rack Cover "I"	PS gear
	09633-00020	Power Steering Hose Nut Wrench	PS gear
	09640-10010	Power Steering Pressure Gauge Set	Power steering fluid
	(09641-01010)	Gauge Assy	
	(09641-01030)	Attachment B	
	(09641-01060)	Attachment E	
	09703-30010	Brake Shoe Return Spring Tool	Tilt steering column
	09922-10010	Variable Open Wrench	PS gear
	09950-40011	Puller B Set	Tilt steering column
	(09951-04010)	Hanger 150	
	(09952-04010)	Slide Arm	
	(09953-04020)	Center Bolt 150	
	(09954-04010)	Arm 25	

	<p>(09955-04061) Claw No.6</p>	
	<p>(09958-04011) Holder</p>	
	<p>09950-50012 Puller C Set</p>	<p>Tilt steering column</p>
	<p>(09951-05010) Hanger 150</p>	
	<p>(09952-05010) Slide Arm</p>	
	<p>(09953-05020) Center Bolt 150</p>	
	<p>(09954-05020) Claw No.2</p>	
	<p>09950-60010 Replacer Set</p>	
	<p>(09951-00180) Replacer 18</p>	<p>PS gear</p>
	<p>(09951-00240) Replacer 24</p>	<p>PS gear</p>
	<p>(09951-00250) Replacer 25</p>	<p>PS gear</p>
	<p>(09951-00280) Replacer 28</p>	<p>PS gear</p>
	<p>(09951-00310) Replacer 31</p>	<p>PS gear</p>

PREPARATION - STEERING

	(09951-00320) Replacer 32	PS vane pump PS gear
	(09951-00340) Replacer 34	PS gear
	(09951-00360) Replacer 36	PS gear
	(09951-00430) Replacer 43	PS gear
	(09952-06010) Adapter	PS gear
	09950-70010 Handle Set	
	(09951-07100) Handle 100	PS vane pump PS gear
	(09951-07150) Handle 150	PS gear
	(09951-07200) Handle 200	PS gear
	(09951-07360) Handle 360	PS gear
	09960-10010 Variable Pin Wrench Set	PS vane pump
	(09962-01000) Variable Pin Wrench Arm Assy	
	(09963-01000) Pin 10	