



REASSEMBLY

REASSEMBLE PROPELLER SHAFT

- Assemble the propeller shaft, align the matchmarks on the universal joint flanges and connect the flanges with the 4 bolts, washers and nuts.
- Torque the 4 nuts.

Torque: 74 N·m (750 kgf·cm, 54 ft·lbf)

HINT:

Assemble the propeller shaft so that each joint faces in the direction as shown in the illustration.

