

REMOVAL

HINT:

For step 1 to 4, refer to [page SR-12](#).

1. REMOVE STEERING WHEEL PAD
2. REMOVE STEERING WHEEL
3. REMOVE STEERING COLUMN UPPER AND LOWER COVERS
4. REMOVE SPIRAL CABLE