
RS02Q-08

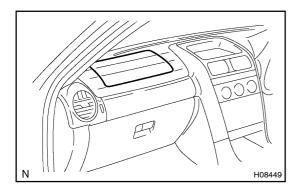


INSPECTION

1. VEHICLE NOT INVOLVED IN COLLISION


- (a) Do a diagnostic system check. (See page DI-287)
- (b) Do a visual check which includes the following item with the front passenger airbag assembly installed in the vehicle.

Check cuts, minute cracks or marked discoloration on the front passenger airbag assembly and instrument panel.

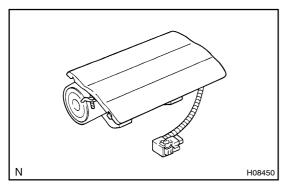


2. VEHICLE INVOLVED IN COLLISION AND AIRBAG IS NOT DEPLOYED

- (a) Do a diagnostic system check. (See page DI-287)
- (b) Do a visual check which includes the following items with the front passenger airbag assembly removed from the vehicle.
 - Check cuts, minute cracks or marked discoloration on the front passenger airbag assembly.
 - Check cuts and cracks in the wire harness, and for chipping in the connectors.
 - Check the deformation or cracks on the instrument panel and instrument panel reinforcement.

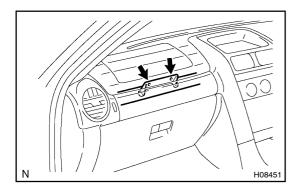

HINT:

 If the instrument panel or instrument panel reinforcement is deformed or cracked, never repair it. Always replace it with a new one.

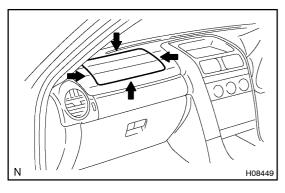

 There should be no interference between the instrument panel and front passenger airbag assembly.

CAUTION:

For removal and installation of the front passenger airbag assembly, see page RS-27 and RS-37, and be sure to follow the correct procedure.

LEXUS IS200 (RM684E)

3. VEHICLE INVOLVED IN COLLISION AND AIRBAG IS DEPLOYED

- (a) Do a diagnostic system check. (See page DI-287)
- (b) Do a visual check which includes the following items with the front passenger airbag assembly removed from the vehicle.
 - Check the deformation or cracks on the instrument panel and instrument panel reinforcement.
 - Check the damage on the connector and wire harness.

HINT:

If the instrument panel or instrument panel reinforcement is deformed or cracked, never repair it. Always replace it with a new one.