

REPLACEMENT

REPLACEMENT REQUIREMENTS

In the following cases, replace the seatback assembly or front seat airbag door.

Case	Replacing part
If the side airbag has been deployed.	Seatback assembly
If the side airbag assembly has been found to be faulty in troubleshooting.	Seatback assembly
If the side airbag assembly has been found to be faulty during checking items. (See page RS-42)	Seatback assembly
If the front seat airbag door has been found to be faulty during checking items. (See page RS-42)	Front seat airbag door
If the seatback assembly has been dropped.	Seatback assembly

CAUTION:

For removal and installation of the seatback assembly, see page RS-39 and RS-50. Be sure to follow the correct procedure.