

## REMOVAL

### NOTICE:


Do not open the cover or the case of the ECU and various electrical devices unless absolutely necessary.

(If the IC terminals are touched, the IC may be destroyed by static electricity.)

### HINT:

For step 1 to 8, refer to page BO-96.

1. REMOVE FLOOR SHIFT LEVER KNOB
2. REMOVE UPPER CONSOLE PANEL
3. w/ LEXUS navigation system:  
REMOVE CENTER REGISTER OPENING COVER
4. REMOVE CENTER CLUSTER FINISH PANEL
5. REMOVE LOWER CENTER CLUSTER FINISH PANEL
6. REMOVE A/C CONTROL WITH RADIO RECEIVER ASSEMBLY
7. REMOVE PARKING BRAKE HOLE COVER
8. REMOVE CONSOLE BOX
9. A/T:  
REMOVE CONTROL POSITION INDICATOR PLATE
  - (a) Disconnect the connector.
  - (b) Disconnect the engagement of the claw at 4 positions and remove the control position indicator plate.

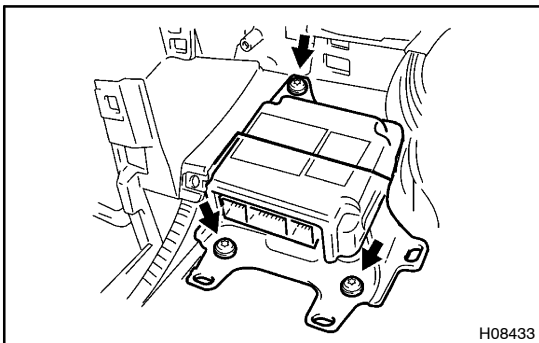

H08433

### 10. REMOVE AIRBAG SENSOR ASSEMBLY

- (a) Disconnect the 3 airbag sensor assembly connectors.

### NOTICE:

Disconnect the connectors with the sensor assembly installed.

- (b) Using a torx wrench, remove the 3 screws and airbag sensor assembly.

**Torx wrench: T40 (Part No.09042-00020 or locally manufactured tool)**