

## INSPECTION

### 1. VEHICLE NOT INVOLVED IN COLLISION

Do a diagnostic system check (See page DI-287).

### 2. VEHICLE INVOLVED IN COLLISION AND AIRBAG IS NOT DEPLOYED

Do a diagnostic system check (See page DI-287).

### 3. VEHICLE INVOLVED IN COLLISION AND AIRBAG IS DEPLOYED

Replace the airbag sensor assembly (See page RS-54).