


REMOVAL

NOTICE:

- If the wiring connector of the SRS is disconnected with the ignition switch at ON or ACC position, DTCs will be recorded.
- Never use SRS parts from another vehicle. When replacing parts, replace them with new parts.
- Never reuse the sensor involved in a collision when the SRS has deployed.
- Never repair a sensor in order to reuse it.

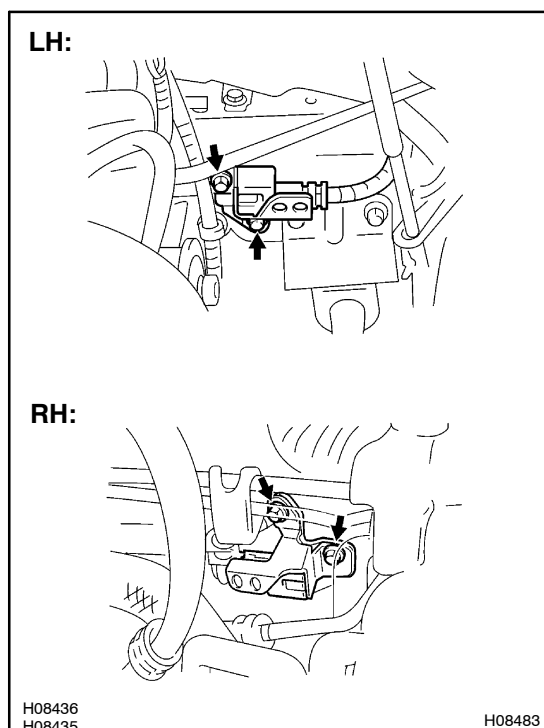

REMOVE FRONT AIRBAG SENSOR

- (a) Disconnect the front airbag sensor connector.

NOTICE:

Disconnect the connector with the sensor assembly installed.

- (b) Remove the 2 bolts and front airbag sensor.
 (c) Employ the same manner described above to the other side.