
SA1J7-01

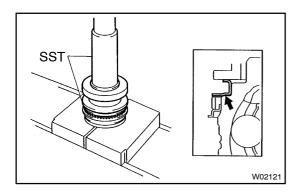

REASSEMBLY


1. INSTALL NEW DUST DEFLECTOR

Using SST and a press, install a new dust deflector.

SST 09309-36010, 09502-12010

NOTICE:

Be careful not to damage the ABS speed sensor rotor.

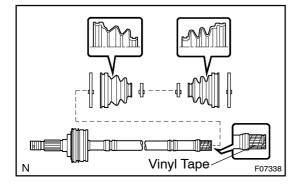

2. TEMPORARILY INSTALL 2 NEW OUTBOARD AND IN-BOARD JOINT BOOTS AND 4 BOOT CLAMPS

HINT:

Before installing the 2 boots, wrap the spline of the drive shaft with vinyl tape to prevent the boots from being damaged.

3. INSTALL TRIPOD

- (a) Place the beveled side of the tripod axial spline toward the outboard joint.
- (b) Align the matchmarks placed before removal.
- (c) Using a brass bar and hammer, tap in the tripod to the drive shaft.

NOTICE:

Do not tap the roller.

(d) Using a snap ring expander, install a new snap ring.

4. INSTALL BOOT TO DRIVE SHAFT

Before assembling the boot, pack the outboard joint and boot with grease in the boot kit.

Grease capacity (Color = Black):


Country (Transmission type)	Capacity
Europe	
Taiwan	120 – 130 g (4.2 – 4.6 oz.)
Australia (M/T)	
New Zealand (M/T)	
Hong Kong (M/T)	
Thai Land (M/T)	
Others	107 – 117 g (3.8 – 4.1 oz.)

5. INSTALL INBOARD JOINT TULIP

(a) Pack the inboard joint and boot with grease in the boot kit. Grease capacity (Color = Yellow ocher):

Country (Transmission type)	Capacity	
Europe		
Taiwan	215 – 225 g (7.6 – 8.9 oz.)	
Australia (M/T)		
New Zealand (M/T)		
Hong Kong (M/T)		
Thai Land (M/T)		
Others	180 – 190 g (6.3 – 6.7 oz.)	

- (b) Align the matchmarks placed before removal, and install the inboard joint tulip to the drive shaft.
- (c) Temporarily install the boot to the inboard joint tulip.
- 6. CHECK DRIVE SHAFT LENGTH
- (a) Make sure that the 2 boots are on the shaft groove.

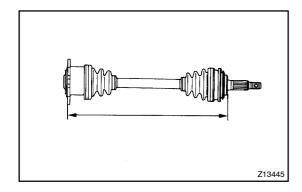

(b) Make sure that the 2 boots are not stretched or contracted when the drive shaft is at standard length.

Standard length:

Country (Transmission type)	Length
Europe	
Taiwan	
Australia (M/T)	RH: 604.3 ± 5.0 mm (23.791 ± 0.197 in.)
New Zealand (M/T)	LH: 558.3 \pm 5.0 mm (21.980 \pm 0.197 in.)
Hong Kong (M/T)	
Thai Land (M/T)	
Others	RH: 603.3 ± 5.0 mm (23.752 ± 0.197 in.) LH: 558.3 ± 5.0 mm (21.980 ± 0.197 in.)

- 7. INSTALL BOOT CLAMPS
- (a) Place 4 boot clamps on the 2 boots.
- (b) Bend the band and lock it with a screwdriver.
- 8. CHECK DRIVE SHAFT (See page SA-58)