

TROUBLESHOOTING

SR0L5-05

PROBLEM SYMPTOMS TABLE

Use the table below to help you find the cause of the problem. The numbers indicate the priority of the likely cause of the problem. Check each part in the order shown. If necessary, repair or replace these parts.

Symptom	Suspect Area	See page	
Hard steering	1. Tires (Improperly inflated)	SA-2	
	2. Power steering fluid level (Low)	SR-6	
	3. Drive belt (Loose)	SR-3	
	4. Front wheel alignment (Incorrect)	SA-5	
	5. Steering system joints (Worn)	-	
	6. Suspension arm ball joints (Worn)	Upper	SA-29
		Lower	SA-39
	7. Steering column (Binding)	-	
	8. Power steering vane pump	SR-25	
9. Power steering gear	SR-38		
Poor return	1. Tires (Improperly inflated)	SA-2	
	2. Front wheel alignment (Incorrect)	SA-5	
	3. Steering column (Binding)	-	
	4. Power steering gear	SR-38	
Excessive play	1. Steering system joints (Worn)	-	
	2. Suspension arm ball joints (Worn)	Upper	SA-29
		Lower	SA-39
	3. Intermediate shaft (Worn)	-	
	4. Front wheel bearing (Worn)	SA-11	
5. Power steering gear	SR-38		
Abnormal noise	1. Power steering fluid level (Low)	SR-6	
	2. Steering system joints (Worn)	-	
	3. Power steering vane pump	SR-25	
	4. Power steering gear	SR-38	