

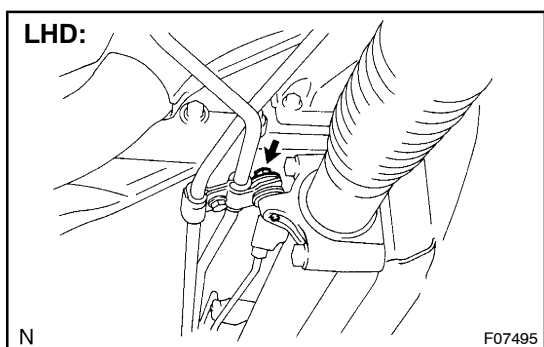


REMOVAL

1. PLACE FRONT WHEELS FACING STRAIGHT AHEAD
2. REMOVE STEERING WHEEL PAD (See page SR-12)
3. REMOVE STEERING WHEEL (See page SR-12)
4. REMOVE RH AND LH FRONT BRAKE CALPERS (See page BR-26)
5. DISCONNECT RH AND LH TIE ROD ENDS (See page SA-32)
6. DISCONNECT SLIDING YOKE (See page SR-12)
7. REMOVE FRONT SUSPENSION MEMBER BRACE
Remove the 7 bolts and front suspension member brace.

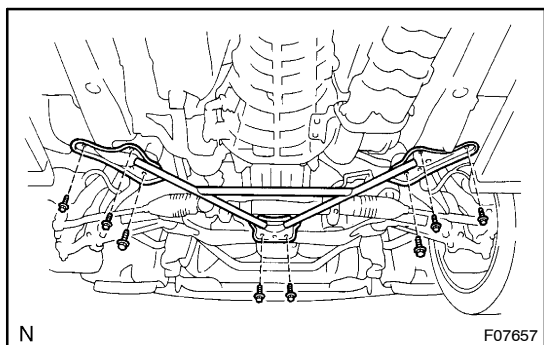

8. DISCONNECT PRESSURE FEED TUBE
 - (a) LHD:
Remove the bolt and disconnect the pressure feed tube clamp.
 - (b) Remove the union bolt and gasket, and disconnect the pressure feed tube.

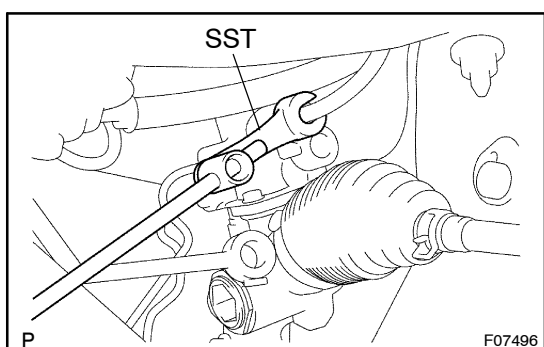

9. DISCONNECT RETURN TUBE
Using SST, disconnect the rerurn tube.
SST 09631-22020
10. REMOVE PS GEAR ASSEMBLY, BRACKET AND GROMMET
Remove the 4 bolts, PS gear assembly, bracket and grommet.