

TORQUE SPECIFICATION

Part tightened		N·m	kgf·cm	ft·lbf
Extension housing x Transmission case		36	370	27
Transmission mounting bracket x Extension housing		12	120	9
Engine rear support member x Frame		25	260	19
Engine rear support member x Transmission mounting bracket		14	135	10
Transmission output speed sensor		5.4	55	48 in.·lbf
Transmission input speed sensor		5.4	55	48 in.·lbf
Solenoid connector		5.4	55	48 in.·lbf
Drain plug		20	205	15
Transmission control shaft lever		16	160	12
Neutral start switch x Transmission case	Bolt	5.4	55	48 in.·lbf
	Nut	6.9	70	60 in.·lbf
No. 1 and No. 2 solenoid valve set bolt		10	100	7
SLU and SLT solenoid valve set bolt		10	100	7
Valve body x Transmission case		10	100	7
ATF temp. sensor and solenoid wiring set bolt		10	100	7
Oil pan x Transmission case		4.4	45	39 in.·lbf
Oil strainer x Valve body		10	100	7
Parking lock pawl bracket x Transmission case		7.4	75	65 in.·lbf
No. 1 floor sft gear shifting rod x Shift lever		13	130	9
Shift lever set bolt		8.3	85	73 in.·lbf
Shift control lever		13	130	9
Shift lever guide housing x Shift lever plate		4.9	50	43 in.·lbf
Air cleaner inlet No. 1 set bolt		5.4	55	48 in.·lbf
Air cleaner assembly set bolt		7.5	75	66 in.·lbf
Oil cooler pipe clamp bolt		5.4	55	48 in.·lbf
Oil cooler pipe union nut		44	450	33
Transmission x Engine	14 mm head	37	380	27
	17 mm head	72	730	53
Stater x Transmission		39	400	29
Stater nut		10	100	7
Filler pipe set bolt		13	130	9
Exhaust pipe assembly x Exhaust manifold		43	440	32
Heated oxygen sensor x Exhaust pipe		44	450	33
Torque converter x Drive plate		41	420	30
Propeller shaft x Differential		74	750	54
Propeller shaft x Body		49	500	36