

## REMOVAL

1. REMOVE NO.2 ENGINE UNDER COVER
2. REMOVE OIL DIPSTICK AND GUIDE FOR A/T
3. REMOVE STARTER
  - (a) Remove the terminal cap and nut, and disconnect the starter cable.
  - (b) Disconnect the starter connector.
  - (c) Remove the 2 bolts and starter.

