



## INSTALLATION

1. **INSTALL STARTER**
  - (a) Install the starter with the 2 bolts.  
**Torque: 37 N·m (380 kgf·cm, 27 ft·lbf)**
  - (b) Connect the starter connector.
  - (c) Connect the starter cable with the nut.  
**Torque: 9.8 N·m (100 kgf·cm, 87 in·lbf)**
  - (d) Install the terminal cap.
2. **INSTALL OIL DIPSTICK AND GUIDE FOR A/T**
3. **INSTALL NO.2 ENGINE UNDER COVER**