



INSPECTION

1. MEASURE PLANETARY PINION GEAR THRUST CLEARANCE

Using a feeler gauge, measure the planetary pinion gear thrust clearance.

Standard clearance:

0.20 – 0.50 mm (0.0079 – 0.0197 in.)

If the clearance is non-standard, inspect the planetary gear thrust washer. If necessary, replace the planetary gear assembly.