



INSPECTION

CHECK PLANETARY SUN GEAR BUSHING

Using a dial indicator, measure the inside diameter of the planetary sun gear bushings.

Maximum inside diameter: 21.58 mm (0.896 in.)

If the inside diameter is greater than the maximum, replace the planetary sun gear.