



EXTENSION HOUSING INSPECTION

ATOJ9-01

INSPECT EXTENSION HOUSING BUSHING

Using a cylinder gauge, measure the inside diameter of the extension housing bushing.

Maximum inside diameter: 38.09 mm (1.4996 in.)

If the inside diameter is greater than the maximum, replace the extension housing.