

# SEAT BELT PRETENSIONER REMOVAL

B03TM-01

## NOTICE:


- If the wiring connector of the seat belt pretensioner is disconnected with the ignition switch at ON or ACC, diagnostic trouble codes will be recorded.
- Never use seat belt pretensioner from another vehicle. When replacing parts, replace them with new parts.

### 1. REMOVE FRONT DOOR INSIDE SCUFF PLATE

Using a screwdriver, remove the front door inside scuff plate.

#### HINT:

Tape the screwdriver tip before use.

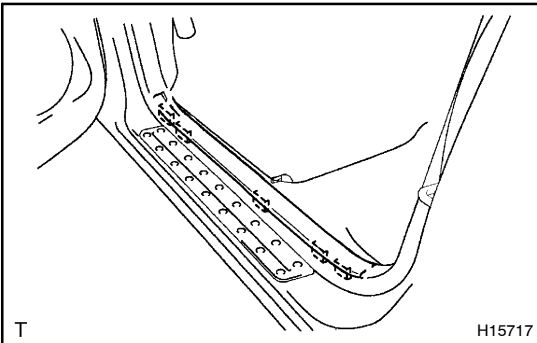


### 2. REMOVE REAR DOOR INSIDE SCUFF PLATE

Using a screwdriver, remove the rear door inside scuff plate.

#### HINT:

Tape the screwdriver tip before use.

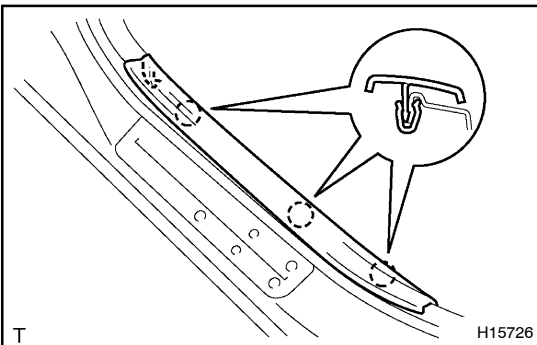


### 3. REMOVE REAR PART OF FRONT DOOR OPENING TRIM

### 4. REMOVE FRONT PART OF REAR DOOR OPENING TRIM

### 5. REMOVE CENTER PILLAR LOWER GARNISH

Remove the center pillar lower garnish as shown in the illustration.

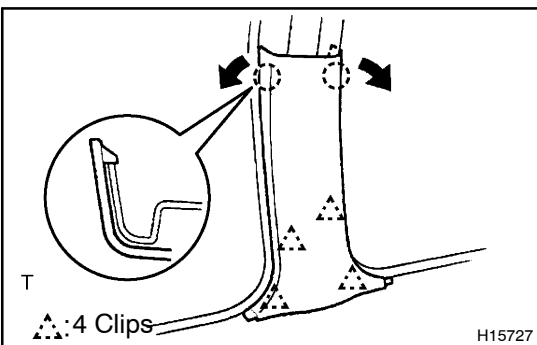

### 6. REMOVE FRONT SEAT OUTER BELT

(a) Using a screwdriver, remove the shoulder anchor cover.

#### HINT:

Tape the screwdriver tip before use.


(b) Remove the bolt and shoulder anchor.

(c) Using a screwdriver, remove the floor anchor cover.

#### HINT:

Tape the screwdriver tip before use.

(d) Remove the bolt and floor anchor.

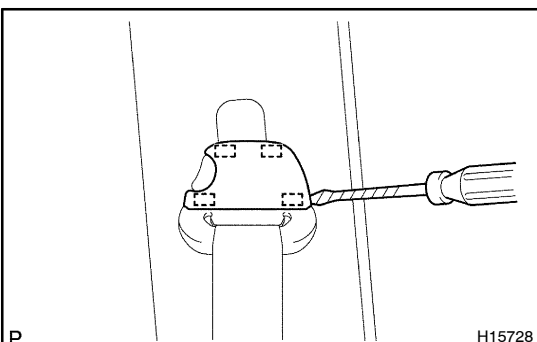


(e) Remove the retractor of front seat outer belt.

**CAUTION:**

**Never disassemble the front seat outer belt.**

**NOTICE:**

**When removing the retractor of front seat outer belt, take care not to pull the seat belt pretensioner wire harness.**

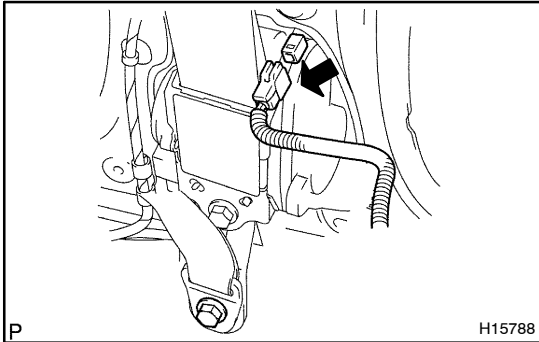

- (1) Disconnect the pretensioner connector as shown in the illustration.

**CAUTION:**

**When removing the seat belt pretensioner, work must be started 90 seconds after the ignition switch is turned to the "LOCK" position and the negative (-) terminal cable is disconnected from the battery.**

- (2) Remove the upper bolt and retractor of front seat outer belt.

**NOTICE:**

**Except when disposing of the seat belt pretensioner, do not remove the shoulder belt anchor plate from the retractor.**