

## PROBLEM SYMPTOMS TABLE

Proceed with troubleshooting of each circuit in the table below.

Symptom	Suspect Area	See page						
<ul style="list-style-type: none"> <li>With the ignition switch in ON position, the SRS warning light sometimes lights up after approx. 6 seconds have elapsed.</li> </ul>	<ul style="list-style-type: none"> <li>SRS warning light circuit (Always lights up when ignition switch is in LOCK position.)</li> </ul>	DI-43						
<ul style="list-style-type: none"> <li>SRS warning light is always lit up even when ignition switch is in the LOCK position.</li> </ul>			<ul style="list-style-type: none"> <li>With the ignition switch in ON position, the SRS warning light does not light up.</li> </ul>	<ul style="list-style-type: none"> <li>SRS warning light circuit (Does not light up when ignition switch is turned to ON.)</li> </ul>	DI-43	<ul style="list-style-type: none"> <li>DTC is not displayed.</li> </ul>	<ul style="list-style-type: none"> <li>Tc terminal circuit</li> </ul>	DI-48
<ul style="list-style-type: none"> <li>With the ignition switch in ON position, the SRS warning light does not light up.</li> </ul>	<ul style="list-style-type: none"> <li>SRS warning light circuit (Does not light up when ignition switch is turned to ON.)</li> </ul>	DI-43						
<ul style="list-style-type: none"> <li>DTC is not displayed.</li> </ul>	<ul style="list-style-type: none"> <li>Tc terminal circuit</li> </ul>	DI-48						
<ul style="list-style-type: none"> <li>SRS warning light is always lit up at the time of DTC check procedure.</li> </ul>			<ul style="list-style-type: none"> <li>DTC is displayed without Tc and CG terminal connection.</li> </ul>					
<ul style="list-style-type: none"> <li>DTC is displayed without Tc and CG terminal connection.</li> </ul>								