



REMOVAL

REMOVE DRIVE BELT

Loosen the drive belt tension by turning the drive belt tensioner clockwise and remove the drive belt.

SST 09216-00041