


# OPERATION

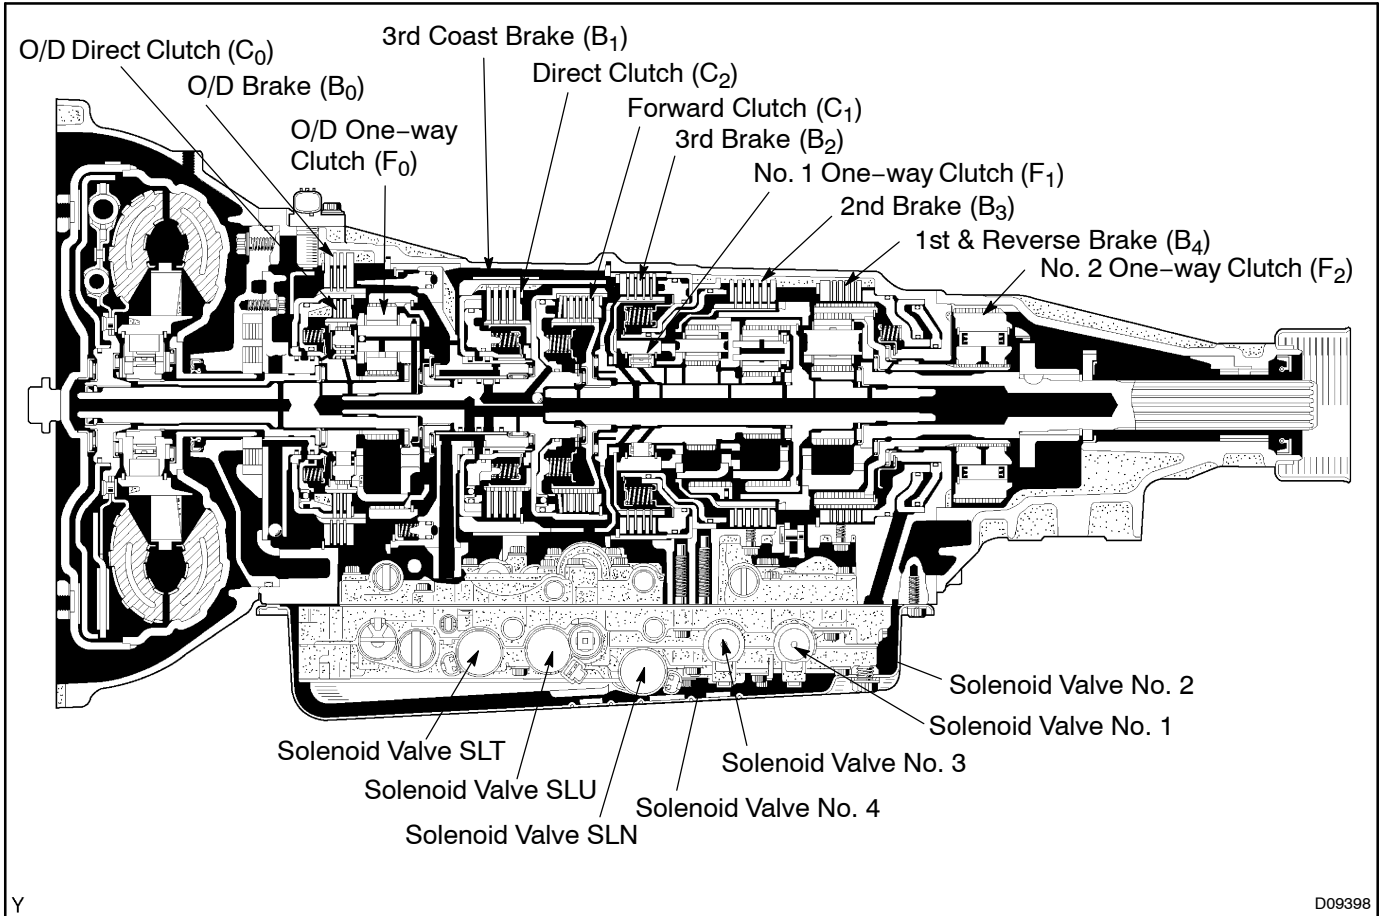

Shift Lever Range	Gear Position	S1	S2	S3	S4	C <sub>0</sub>	C <sub>1</sub>	C <sub>2</sub>	B <sub>0</sub>	B <sub>1</sub>	B <sub>2</sub>	B <sub>3</sub>	B <sub>4</sub>	F <sub>0</sub>	F <sub>1</sub>	F <sub>2</sub>
P	Park	ON	OFF	ON	OFF	○										
R	Reverse	ON	OFF	OFF	OFF			○	○				○			
N	Neutral	ON	OFF	ON	OFF	○										
D M (5)*	1st	ON	OFF	OFF	OFF	○	○							○		○
	2nd	ON	ON	OFF	OFF	○	○					○		○		
	3rd	OFF	ON	OFF	OFF	○	○				○			○	○	
	4th	OFF	OFF	ON	OFF	○	○	○			○			○		
	5th	OFF	OFF	OFF	ON		○	○	○		○					
3	1st	ON	OFF	OFF	OFF	○	○							○		○
	2nd	ON	ON	OFF	OFF	○	○					○		○		
	3rd	OFF	ON	ON	OFF	○	○			○	○			○	○	
2	1st	ON	OFF	ON	OFF	○	○							○		○
	2nd	ON	ON	OFF	OFF	○	○					○		○		
L	1st	ON	OFF	OFF	OFF	○	○						○	○		○

○ : Operating

\* : When the shift lever range is "M" and the gear position indicator shows "5".