


EXTENSION HOUSING OIL SEAL ON-VEHICLE REPAIR

ATOHE-03


1. REMOVE NO. 1 AND NO. 2 ENGINE UNDER COVERS
2. REMOVE LH FRONT FLOOR CENTER COVER
3. REMOVE NO. 1 REAR FLOOR BOARD
4. POSITION PAN TO CATCH ANY FLUID THAT MAY DRIP
5. REMOVE EXHAUST PIPE ASSEMBLY
(See page EM-99)
6. REMOVE PROPELLER SHAFT (See page PR-4)

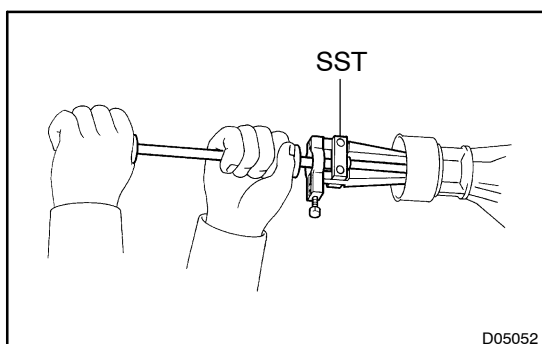

7. REMOVE EXTENSION HOUSING OIL SEAL

Using SST, remove the oil seal.

SST 09308-00010

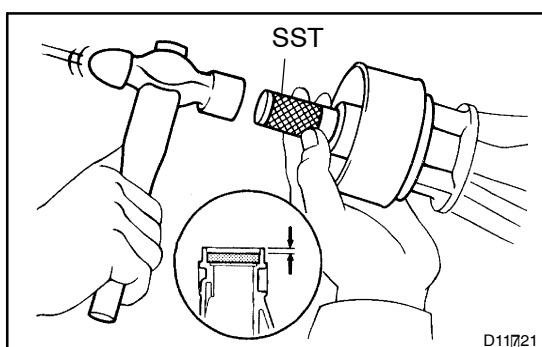

8. INSTALL EXTENSION HOUSING OIL SEAL

- (a) Using SST and a hammer, carefully drive a new oil seal in as far as it will go.

SST 09325-20010

Oil seal drive in depth: 5.4 - 5.8 mm (0.21 - 0.22 in.)

NOTICE:

Clean the extension housing before removing the oil seal.

- (b) Coat the lip of a new oil seal with MP grease.

9. INSTALL PROPELLER SHAFT (See page PR-9)

10. INSTALL EXHAUST PIPE ASSEMBLY

(See page EM-99)

11. FILL ATF AND CHECK FLUID LEVEL

(See page DI-170)

12. REMOVE NO. 1 REAR FLOOR BOARD

13. REMOVE LH FRONT FLOOR CENTER COVER

14. INSTALL NO. 1 AND NO. 2 ENGINE UNDER COVERS