


O/D DIRECT CLUTCH SPEED SENSOR

ON-VEHICLE REPAIR

ATOXW-06

1. REMOVE NO. 1 AND NO. 2 ENGINE UNDER COVERS
2. REMOVE LH FRONT FLOOR CENTER COVER
3. REMOVE NO. 1 REAR FLOOR BOARD

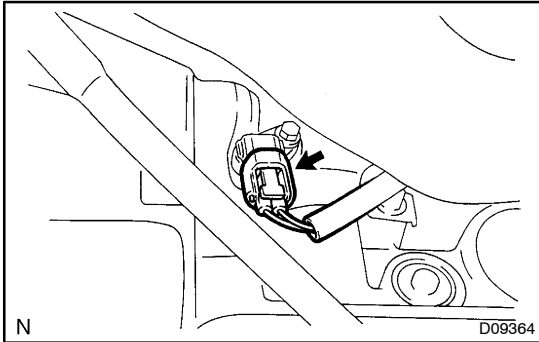

4. DISCONNECT O/D DIRECT CLUTCH SPEED SENSOR CONNECTOR
5. REMOVE O/D DIRECT CLUTCH SPEED SENSOR
 - (a) Remove the bolt and O/D direct clutch speed sensor.
 - (b) Remove the O-ring from the O/D direct clutch speed sensor.
6. INSTALL O/D DIRECT CLUTCH SPEED SENSOR
 - (a) Coat a O-ring with ATF and install it to the O/D direct clutch speed sensor.
 - (b) Install the O/D direct clutch speed sensor to the transmission case and torque the bolt.
Torque: 5.4 N·m (55 kgf·cm, 48 in·lbf)
7. INSTALL NO. 1 REAR FLOOR BOARD
8. INSTALL LH FRONT FLOOR CENTER COVER
9. INSTALL NO. 1 AND NO. 2 ENGINE UNDER COVERS