

TROUBLESHOOTING

PROBLEM SYMPTOMS TABLE

WIPER AND WASHER SYSTEM

BE16S-04

Symptom	Suspect Area	See page
Rear wiper does not operate.	1. WIPER Fuse 2. Rear Wiper Motor 3. Rear Wiper Switch 4. Wire Harness	- BE-28 BE-28 -
Rear wiper does not operate in INT or ON position.	1. Rear Wiper Switch 2. Wire Harness	BE-28 -
Rear wiper does not return to OFF position.	1. Rear Wiper Motor 2. Wire Harness	BE-28 -
Rear Washer Motor does not operate.	1. Rear Washer Motor 2. Rear Washer Switch 3. Wire Harness	BE-28 BE-28 -
Washer fluid does not operate.	Washer Hose and Nozzle	-