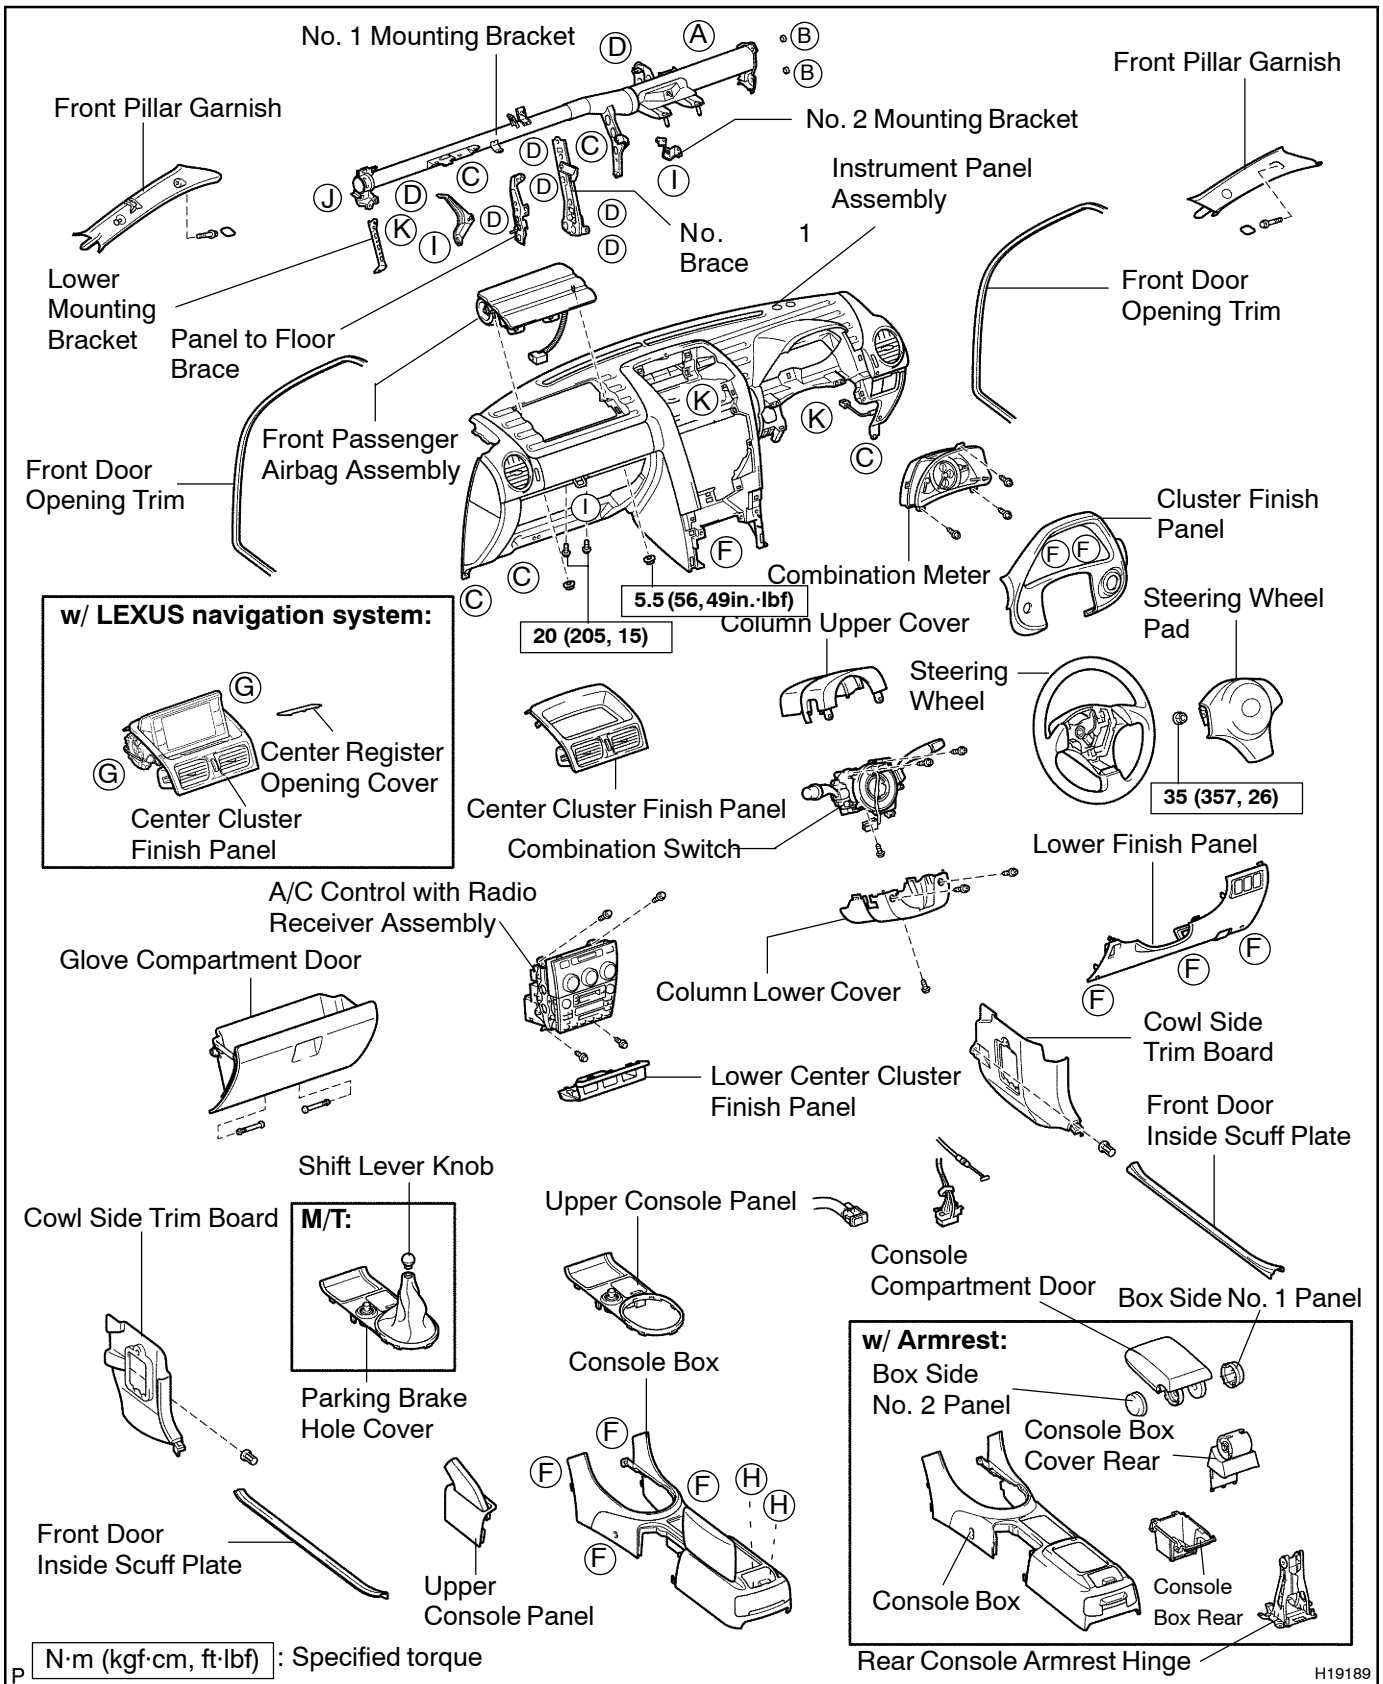
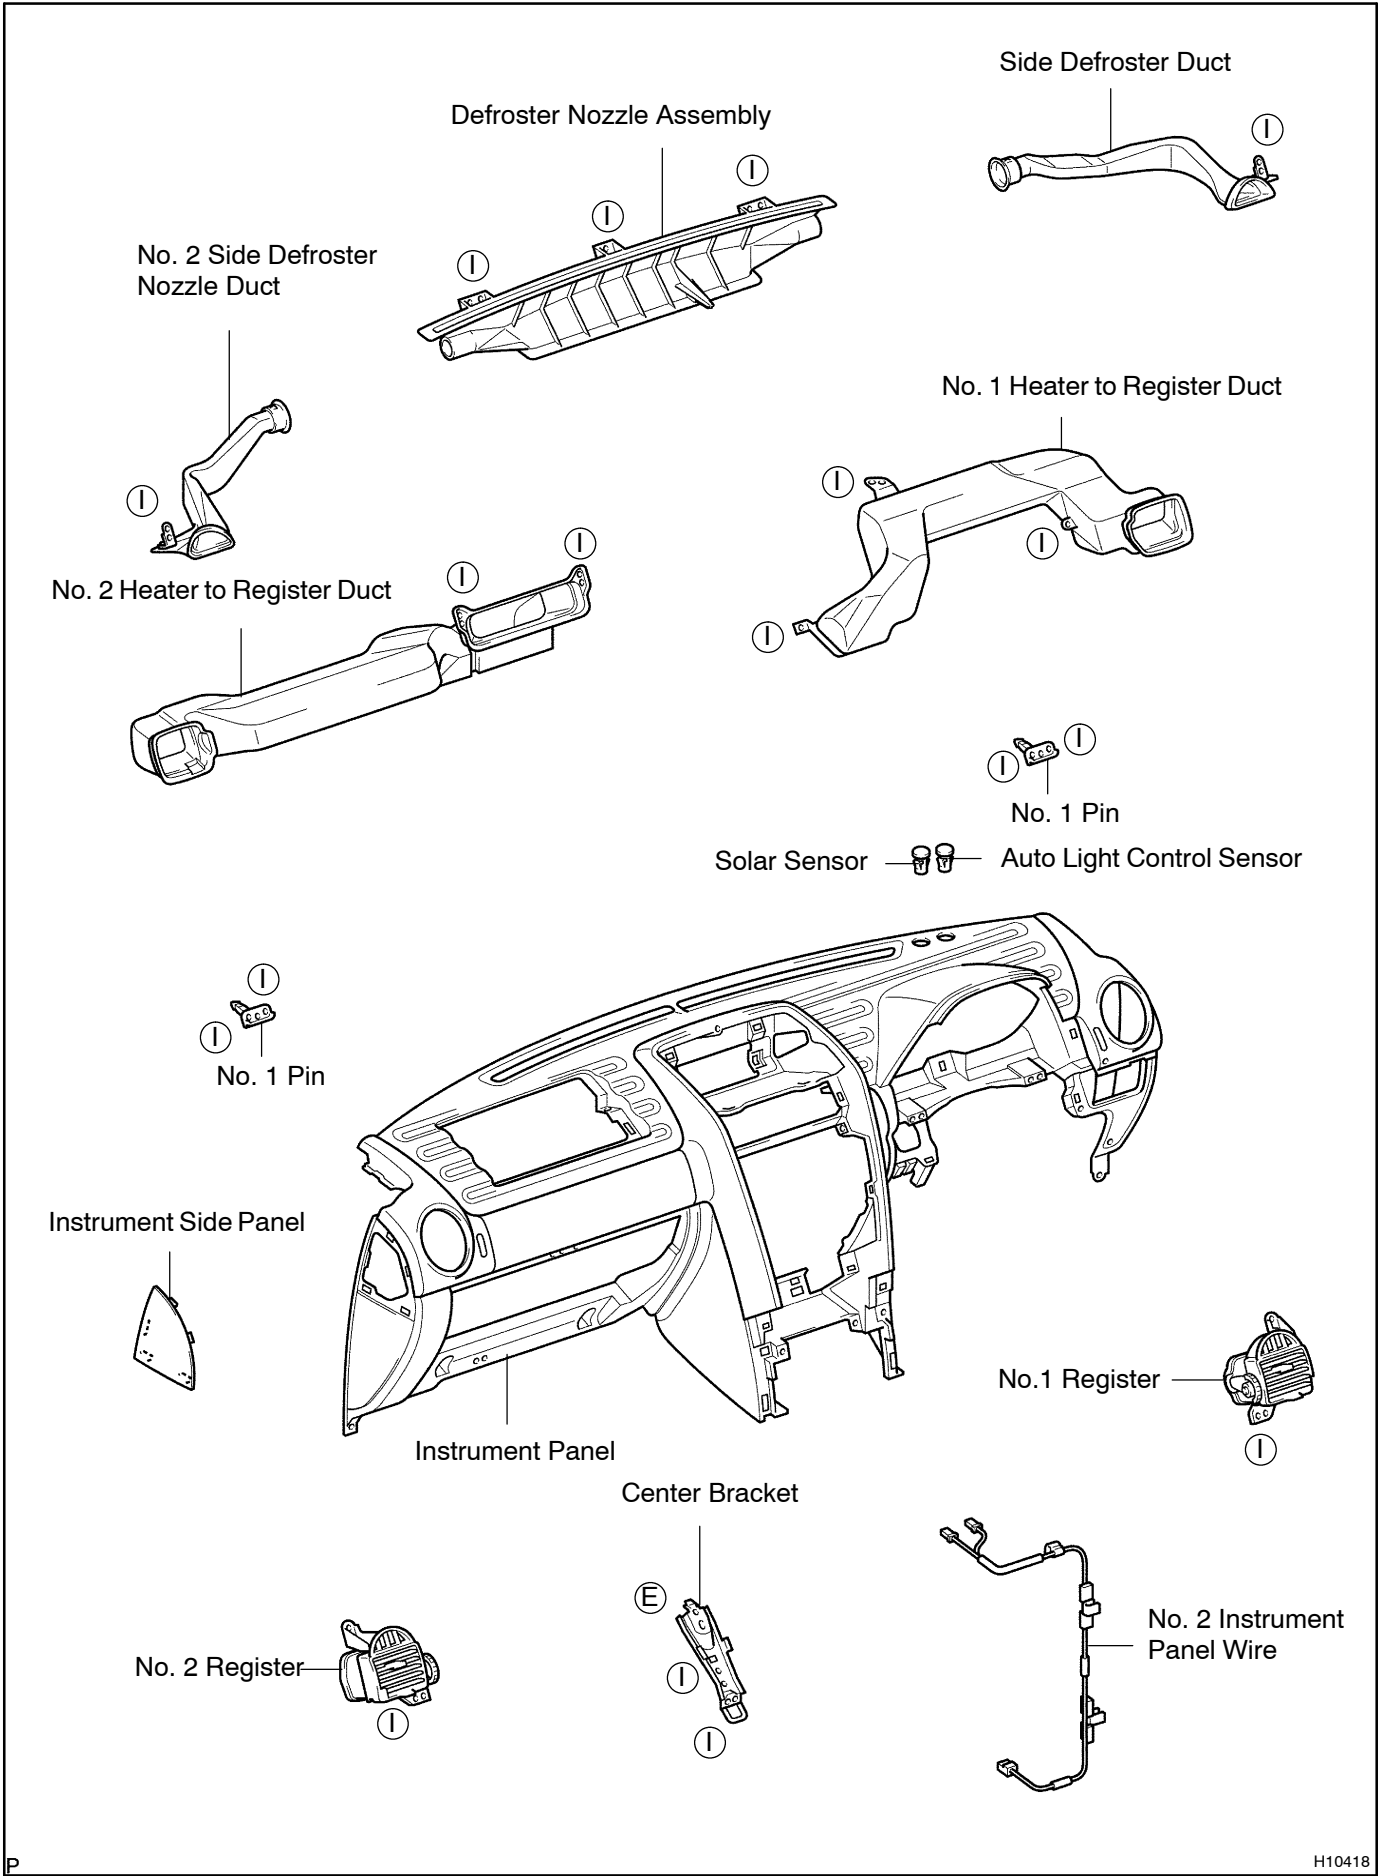


# INSTRUMENT PANEL COMPONENTS

B00WL-07



H19189

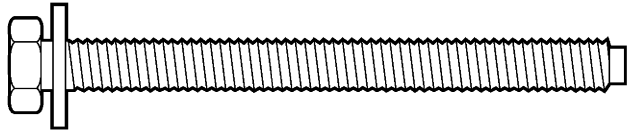
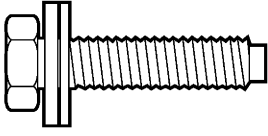
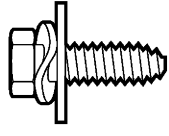
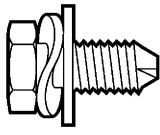
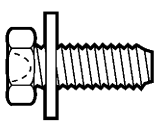

 
 

 
 


P

H10418

HINT:

Screw shapes and size are indicated in the table below. The codes ("A"-"K") correspond to those indicated on the previous pages.

								mm (in.)
code	Shape						Size	
Ⓐ							$\varnothing = 8$ (0.31) L = 90 (3.54)	
code	Shape			Size	code	Shape	Size	
Ⓑ				$\varnothing = 8$ (0.31) L = 35 (1.38)	Ⓒ		$\varnothing = 6$ (0.24) L = 20 (0.79)	
code	Shape	Size	code	Shape	Size	code	Shape	Size
Ⓓ		$\varnothing = 8$ (0.31) L = 18 (0.71)	Ⓔ		$\varnothing = 6$ (0.24) L = 18 (0.71)	Ⓕ		$\varnothing = 5.22$ (0.2055) L = 16 (0.63)
Ⓖ		$\varnothing = 5$ (0.20) L = 16 (0.63)	Ⓖ		$\varnothing = 5$ (0.20) L = 16 (0.63)	Ⓖ		$\varnothing = 5$ (0.20) L = 14 (0.55)
Ⓙ		$\varnothing = 8$ (0.31)	Ⓚ		$\varnothing = 6$ (0.24)			

T

H11337