


REMOVAL

1. TAKE OUT FLUID WITH SYRINGE

NOTICE:

Do not let brake fluid remain on a painted surface. Wash it off immediately.

2. DISCONNECT BRAKE FLUID LEVEL SWITCH CONNECTOR

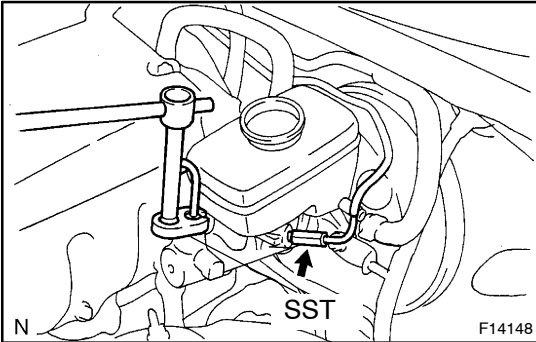


3. DISCONNECT BRAKE LINES

Using SST, disconnect the 2 brake lines.

SST 09023-00100

Torque: 15 N·m (155 kgf·cm, 11 ft·lbf)

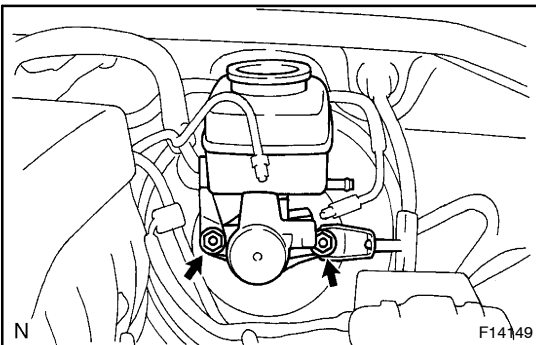

4. REMOVE MASTER CYLINDER

(a) 1G-FE engine RHD models:

Remove the bolt and cable bracket.

Torque: 10 N·m (102 kgf·cm, 7 ft·lbf)

(b) Disconnect the brake hose.

(c) Remove the 2 nuts, and pull out the check valve bracket, clamp, master cylinder and gasket.

Torque: 13 N·m (130 kgf·cm, 9 ft·lbf)