



REMOVAL


1. REMOVE FRONT LH WHEEL
Torque: 103 N·m (1,050 kgf·cm, 76 ft·lbf)
2. □ REMOVE MASTER CYLINDER (See page BR-7)
3. DISCONNECT VACUUM HOSE FROM BRAKE BOOSTER

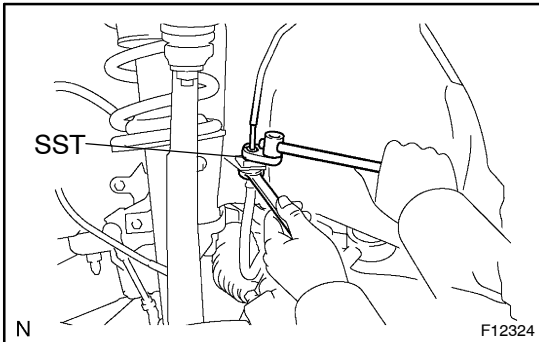


4. LHD models:
DISCONNECT FRONT LH BRAKE LINE
 - (a) Using SST and spanner, disconnect the brake line from the flexible hose of front LH brake.
SST 09023-00100
 - (b) Separate the grommet from body through the brake line.

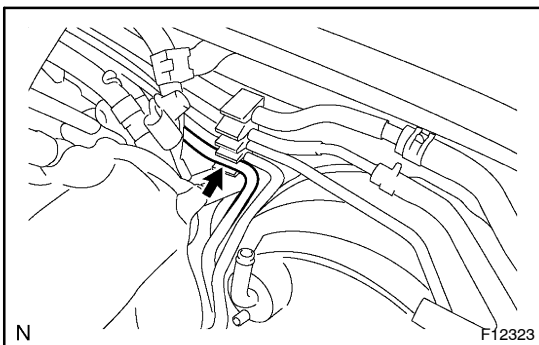


- (c) Disconnect the front LH brake line from the clamp.

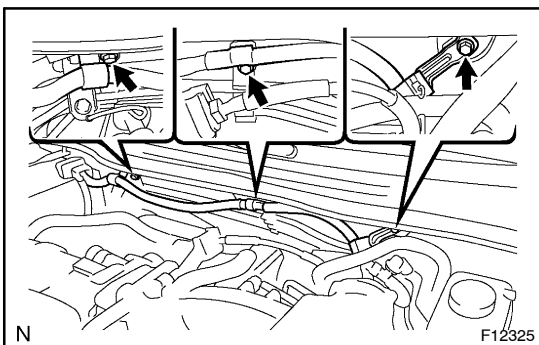

5. REMOVE BRAKE BOOSTER
 - (a) LHD models:
Remove the 3 bolts and disconnect the 3 clamps.
 - (b) □ Remove the lower finish panel (See page BO-56).
 - (c) Remove the return spring, clip and clevis pin.

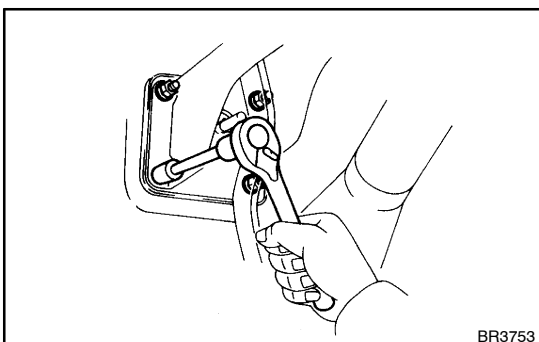

- (d) Remove the clevis and 4 nuts.

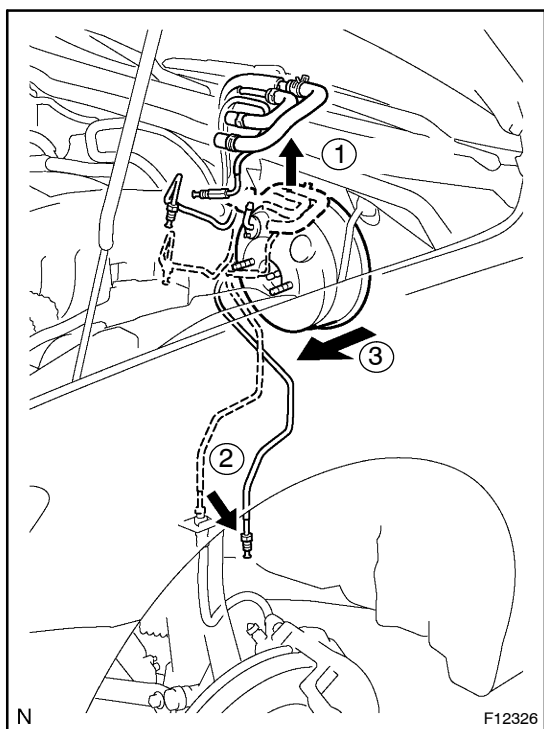

- (e) LHD models:
Move the brake line as illustrated and ensure sufficient space.
- (f) Pull out the booster and gasket.