


REMOVAL

1. REMOVE ENGINE UNDER COVER
2. REMOVE DRIVE BELT

Using SST, loosen the belt tension by turning the drive belt tensioner clockwise from the bottom side, and remove the drive belt.


SST 09216-00041

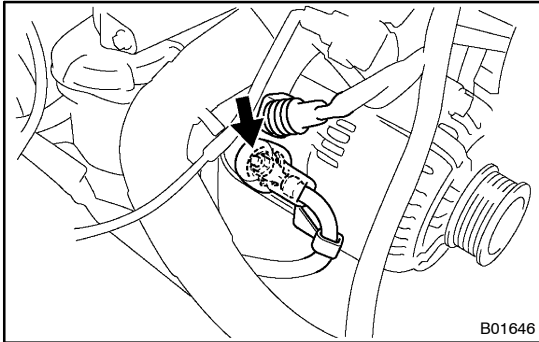

3. REMOVE ALTERNATOR

- (a) Disconnect the alternator connector.
- (b) Remove the rubber cap and nut, and disconnect the alternator wire.

Torque: 9.8 N·m (100 kgf·cm, 7 ft·lbf)

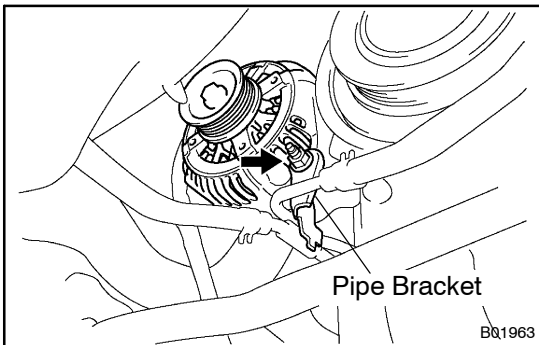

- (c) Remove the bolt, nut and alternator.

Torque: 40 N·m (410 kgf·cm, 30 ft·lbf)