



INSPECTION

INSPECT WATER PUMP

- (a) Visually check the air hole and water hole for coolant leakage.

If necessary, replace the water pump.

- (b) Turn the pulley seat, and check that the water pump bearing is not rough or noisy.

If necessary, replace the water pump.