


## REMOVAL

1. REMOVE NO. 1 ENGINE UNDER COVER
2. DRAIN ENGINE COOLANT
3. REMOVE AIR CLEANER INLET
4. REMOVE AIR CLEANER ASSEMBLY
5. REMOVE RADIATOR AND COOLING FAN ASSEMBLY
  - (a) Disconnect the upper and lower radiator hoses from the radiator.
  - (b) Disconnect the lower radiator hose from the radiator.
  - (c) Disconnect the ECU outlet duct.
  - (d) Disconnect the 2 electric cooling fan connectors.
  - (e) Disconnect the water temperature switch connector.

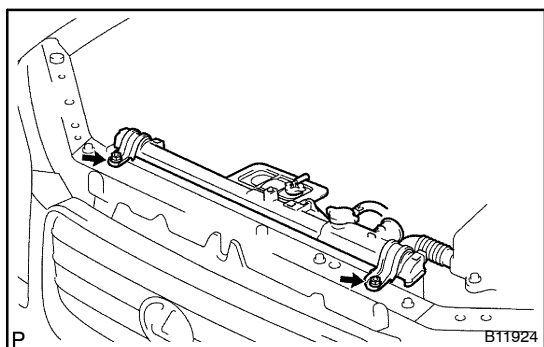

- (f) Remove the 2 nuts and 2 upper radiator supports.
- (g) Remove the radiator and cooling fan assembly.
- (h) Remove the 2 lower radiator supports.
6. REMOVE ELECTRIC COOLING FAN ASSEMBLY
  - (a) Disconnect the radiator reservoir hose from the radiator.
  - (b) Remove the 6 bolts and cooling fan assembly.