


INSTALLATION

1. INSTALL COOLING FAN ASSEMBLY

- (a) Install the cooling fan assembly with the 6 bolts.
Torque: 5.0 N·m (50 kgf·cm, 44 in·lbf)
- (b) Connect the radiator reservoir hose to the radiator.

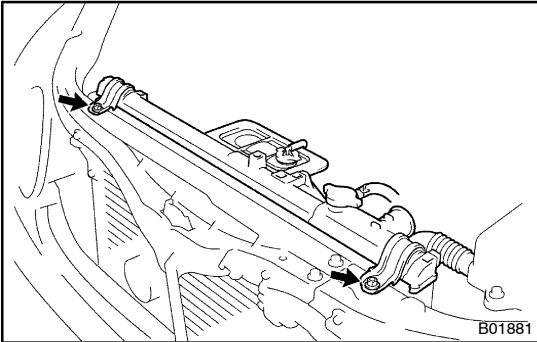

2. INSTALL RADIATOR AND COOLING FAN ASSEMBLY

- (a) Install the 2 lower radiator supports to the radiator.
- (b) Attach the 2 lower radiator supports on the radiator to the body bracket.
- (c) Install the radiator and electric cooling fan assembly with the 2 upper radiator supports and 2 nuts.
Torque: 13.5 N·m (135 kgf·cm, 10 ft·lbf)
- (d) Connect these parts:
 - Upper radiator hose to radiator
 - Lower radiator hose to radiator
 - ECU outlet duct to ECU box
 - 2 electric cooling fan connectors
 - Water temperature switch connector

3. INSTALL AIR CLEANER ASSEMBLY

4. INSTALL AIR CLEANER INLET

5. FILL WITH ENGINE COOLANT

6. CHECK ENGINE COOLANT LEAK (See page CO-12)

7. INSTALL NO. 1 ENGINE UNDER COVER