


COOLING FAN RELAY INSPECTION

CO1AT-01

1. INSPECT NO.1 AND NO. 3 COOLING FAN RELAY (Marking: FAN NO. 1 and FAN NO. 3)


- (a) Inspect the relay continuity.
- (1) Check that there is continuity between terminals 1 and 2.
- If there is no continuity, replace the relay.
- (2) Check that there is no continuity between terminals 3 and 5.

If there is continuity, replace the relay.

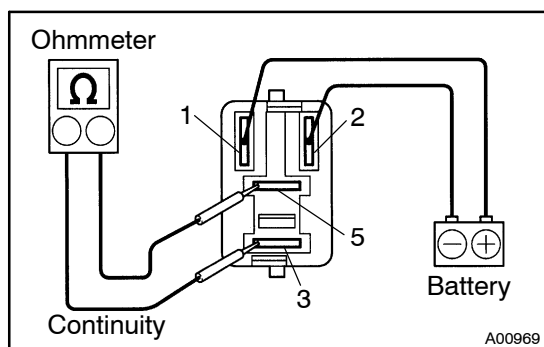

- (b) Inspect the relay operation.
- (1) Apply battery positive voltage to terminals 1 and 2.
 - (2) Using an ohmmeter, check that there is continuity between terminals 3 and 5.


If there is continuity, replace the relay.

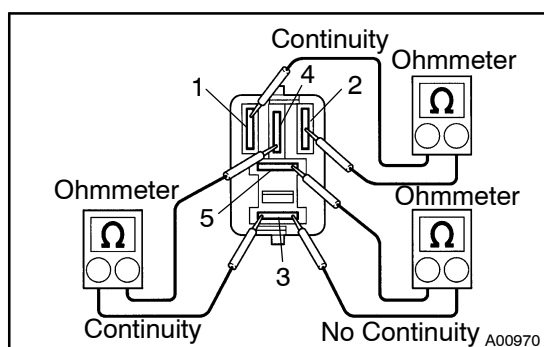

2. INSPECT NO. 2 COOLING FAN RELAY (Marking: FAN NO. 2)

- (a) Inspect the relay continuity.
- (1) Check that there is continuity between terminals 1 and 2.
- If there is no continuity, replace the relay.
- (2) Check that there is continuity between terminals 3 and 4.
- If there is no continuity, replace the relay.
- (3) Check that there is no continuity between terminals 3 and 5.

If there is continuity, replace the relay.

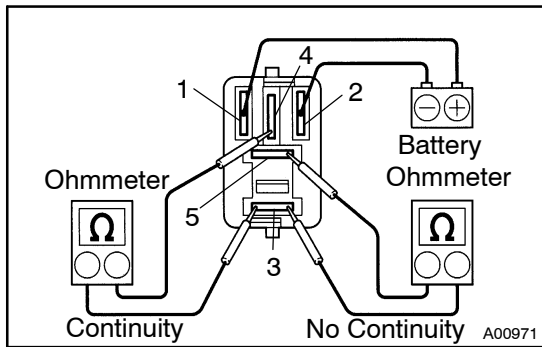

(b) Inspect the relay operation.

- (1) Apply battery positive voltage to terminals 1 and 2.
- (2) Check that there is no continuity between terminals 3 and 4.

If there is continuity, replace the relay.

- (3) Check that there is continuity between terminals 3 and 5.

If there is no continuity, replace the relay.