

<b>DTC</b>	<b>P1121/19</b>	<b>Accelerator Pedal Position Sensor Range/Performance Problem</b>
------------	-----------------	--

## CIRCUIT DESCRIPTION

Refer to DTC P1120/19 on [page DI-103](#).

DTC No.	DTC Detecting Condition	Trouble Area
P1121/19	Condition (a) continues for 2.0 seconds: (a) Difference between VPA and VPA2 is out of threshold	<ul style="list-style-type: none"> <li>Accelerator pedal position sensor</li> </ul>

## INSPECTION PROCEDURE

HINT:

Read freeze frame data using hand-held tester or OBD scan tool. Because freeze frame records the engine conditions when the malfunction is detected. When troubleshooting, it is useful for determining whether the vehicle was running or stopped, the engine was warmed up or not, the air-fuel ratio was lean or rich, etc. at the time of the malfunction.

<b>Replace accelerator pedal position sensor (See <a href="#">page FI-37</a>).</b>
--