

PROBLEM SYMPTOMS TABLE

If a normal code is displayed during the DTC check but the problem still occurs, check the circuits for each problem symptom in the order given in the table below and proceed to the relevant troubleshooting page.

Symptom	Suspect Area	See Page
ABS does not operate	<p>Only when 1. to 4. are all normal and the problem is still occurring, replace the Skid control ECU.</p> <p>5. Check the DTC, reconfirming that the normal code is output.</p> <p>6. G power source circuit</p> <p>7. Speed sensor circuit</p> <p>8. Check the brake actuator with hand-held tester. If abnormal, check the hydraulic circuit for leakage. (See page DI-315)</p>	<p>DI-251</p> <p>DI-289</p> <p>DI-263</p>
ABS does not operate efficiently	<p>Only when 1. to 4. are all normal and the problem is still occurring, replace the Skid control ECU.</p> <p>1. Check the DTC, reconfirming that the normal code is output</p> <p>2. Speed sensor circuit</p> <p>3. Stop light switch circuit</p> <p>4. Check the brake actuator with hand-held tester. If abnormal, check the hydraulic circuit for leakage. (See page DI-315)</p>	<p>DI-251</p> <p>DI-263</p> <p>DI-296</p>
ABS warning light abnormal	<p>1. ABS warning light circuit</p> <p>2. Skid control ECU</p>	<p>DI-303</p> <p>IN-34</p>
BRAKE warning light abnormal	<p>1. BRAKE warning light circuit</p> <p>2. Skid control ECU</p>	<p>DI-311</p> <p>IN-34</p>
DTC check cannot be done	<p>Only when 1. and 2. are all normal and the problem is still occurring, replace the Skid control ECU.</p> <p>1. ABS warning light circuit</p> <p>2. TRC OFF indicator light circuit</p>	<p>DI-303</p> <p>DI-306</p>
Speed sensor signal check cannot be done	<p>1. TS terminal circuit</p> <p>2. Skid control ECU</p>	<p>DI-313</p> <p>IN-34</p>
TRC does not operate	<p>Only when inspection circuits for each problem symptom are all normal and the problem is still occurring, replace the Skid control ECU.</p> <p>1. Check the DTC, reconfirming that the normal code is output.</p> <p>2. G power source circuit</p> <p>3. Check the hydraulic circuit for leakage.</p> <p>4. Speed sensor circuit</p>	<p>DI-251</p> <p>DI-289</p> <p>DI-315</p> <p>DI-263</p>
SLIP indicator light abnormal	SLIP indicator light circuit	DI-309
TRC OFF indicator light abnormal	<p>Only when inspection circuits for each problem symptom are all normal and the problem is still occurring, replace the Skid control ECU.</p> <p>1. TRC OFF indicator light circuit</p> <p>2. TRC cut switch circuit</p>	<p>DI-306</p> <p>DI-306</p>