

CIRCUIT INSPECTION

| | | |
|------------|-------------------|--|
| DTC | C1201 / 51 | Engine Control System Malfunction |
|------------|-------------------|--|

CIRCUIT DESCRIPTION

If any trouble occurs in the engine control system, the ECU prohibits TRC control.

| DTC No. | DTC Detecting Condition | Trouble Area |
|------------|--|-------------------------|
| C1201 / 51 | Conditions 1. and 2. continue for 5 sec.: 1. Engine speed: 500 rpm or more. 2. A trouble signal in the engine control system is input. | • Engine control system |

INSPECTION PROCEDURE

| | |
|----------|--|
| 1 | Check the DTC for the engine (See page 1G-FE: DI-4 of Pub. No. RM684E, 2JZ-GE: DI-4). |
|----------|--|

*1

Repair engine control system according to the code output.

*2

Check for engine ECU connected to malfunction indicator light.

*1: Output NG code

*2: Malfunction indicator light remains ON