

DTC	Always ON	Skid Control ECU Malfunction
------------	------------------	-------------------------------------

CIRCUIT DESCRIPTION

DTC No.	DTC Detecting Condition	Trouble Area
Always ON	Skid control ECU internal malfunction is detected.	• Skid control ECU

INSPECTION PROCEDURE

1	Is DTC output?
----------	-----------------------

Check DTC on [page DI-251](#).

YES

Repair circuit indicated by the code output.

NO

2	Is normal code displayed?
----------	----------------------------------

YES

Check solenoid relay. Check for short circuit in harness and connector between solenoid relay and check connector ([See page IN-34](#)).

NO

3	Does ABS warning light go off?
----------	---------------------------------------

YES

Check for open or short circuit in harness and connector between ECU-IG fuse and skid control ECU ([See page IN-34](#)).

NO

4 Check battery voltage.**CHECK:**

Check the battery voltage.

OK:

10 – 14 V

NG

Check and repair the charging system.

OK**5** Check ABS warning light.**PREPARATION:**

- (a) Turn the ignition switch OFF.
- (b) Disconnect the connector from the skid control ECU.
- (c) Turn the ignition switch ON.

CHECK:

Check the ABS warning light goes off.

OK

Check and replace skid control ECU.

NG

Check for short circuit in harness and connector between ABS warning light, DLC3 and skid control ECU (See page IN-34).