


# SLIP Indicator Light Circuit

## CIRCUIT DESCRIPTION

The SLIP indicator blinks during TRC operation.

## WIRING DIAGRAM

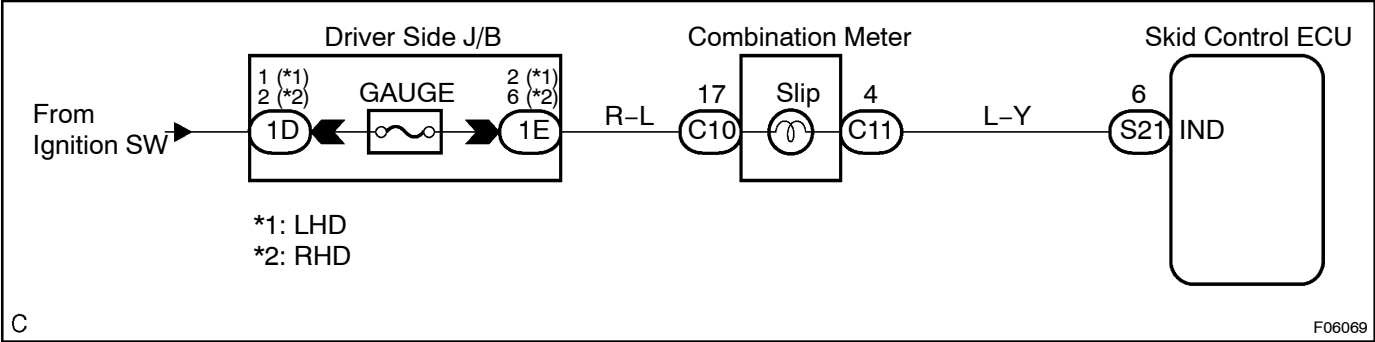

## INSPECTION PROCEDURE

HINT:

Start the inspection from step 1 in case of using the hand-held tester and start from step 2 in case of not using the hand-held tester.

1	Check operation of the SLIP indicator light.
---	--

### PREPARATION:

- (a) Connect the hand-held tester to the DLC3.
- (b) Turn the ignition switch ON and push the hand-held tester main switch ON.
- (c) Select the ACTIVE TEST mode on the hand-held tester.

### CHECK:

Check that "ON" and "OFF" of the SLIP indicator light can be shown on the combination meter by the hand-held tester.

OK

Go to step 4.

NG

2	Check that the SLIP indicator light is ON for 3 seconds soon after ignition switch is turned ON.
---	--

OK

Check and replace skid control ECU.

NG

3	Check SLIP indicator light.
---	-----------------------------

See combination meter troubleshooting on page BE-2.

NG	Repair bulb or combination meter assembly.
----	--

OK
----

4	Check for open and short circuit in harness and connector between skid control ECU and SLIP indicator light (See page IN-34).
---	---

NG	Repair or replace harness or connector.
----	---

OK
----

Check and replace skid control ECU.
-------------------------------------