


## BRAKE Warning Light Circuit

### CIRCUIT DESCRIPTION

The BRAKE warning light lights up when the brake fluid is insufficient, the parking brake is applied or the EBD is defective.

### WIRING DIAGRAM

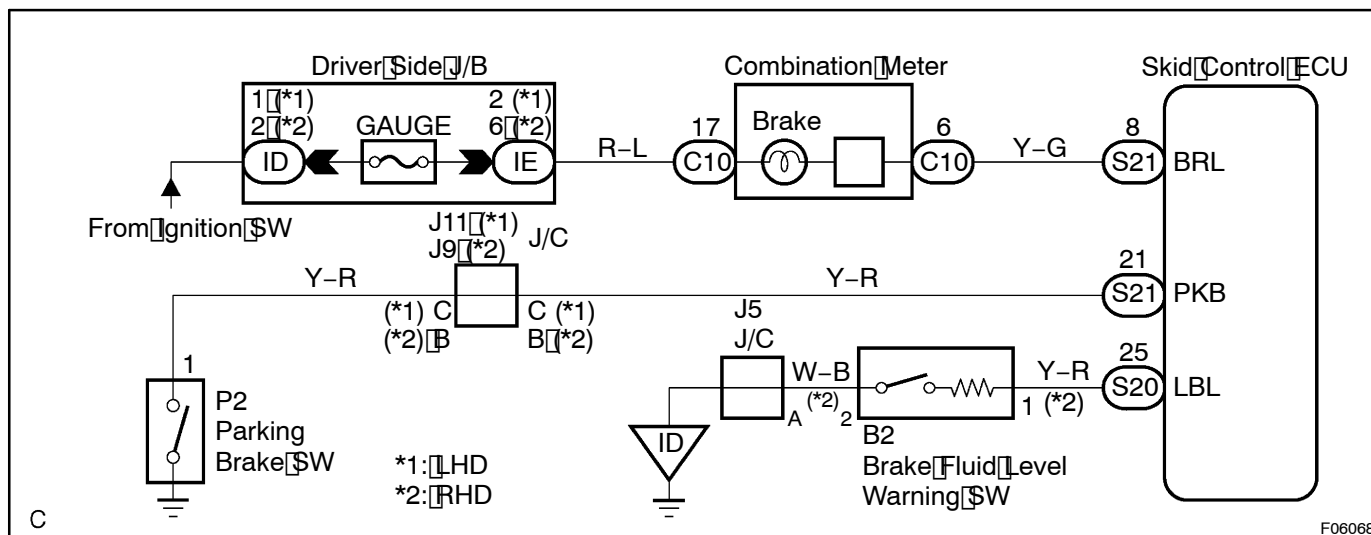

### INSPECTION PROCEDURE

1 Check parking brake switch circuit (See page BE-2)

NG

Repair or replace parking brake switch circuit.

OK

2 Check brake fluid level warning switch circuit (See page BE-2)

NG

Repair or replace brake fluid level warning switch circuit.

OK

**3** Is DTC output for ABS?

Check DTC on [page DI-251](#).

**Yes**

Repair circuit indicated by the output code.

**No**

**4** Check BRAKE warning light.

See combination meter troubleshooting on [page BE-2](#).

**NG**

Repair or replace combination meter.

**OK**

Check and replace skid control ECU.