

DTC	C1201 / 51	Engine Control System Malfunction
------------	-------------------	--

CIRCUIT DESCRIPTION

If any trouble occurs in the engine control system, the ECU prohibits TRC and VSC control.

DTC No.	DTC Detecting Condition	Trouble Area
C1201 / 51	Conditions 1. and 2. continue for 5 sec.: 1. Engine speed: 500 rpm or more. 2. A trouble signal in the engine control system is input.	• Engine control system

INSPECTION PROCEDURE

1	Check the DTC for the engine (See page 1G-FE: DI-4 of Pub. No. RM684E, 2JZ-GE: DI-4).
----------	--

*1

Repair engine control system according to the code output.

*2

Check for engine ECU connected to malfunction indicator light.

*1: Output NG code

*2: Malfunction indicator light remains ON