

DTC	C1202 / 52	Brake Fluid Warning Switch Circuit
------------	-------------------	---

CIRCUIT DESCRIPTION


The brake fluid level warning switch sends the appropriate signal to the ECU when the brake fluid level drops.

HINT:

Pull the parking brake lever also turns on the brake warning light but does not diagnose DTC No. C1202 / 52.

DTC No.	DTC Detecting Condition	Trouble Area
C1202 / 52	When any of the following 1. or 2. is detected: 1. Low fluid level condition in the brake master cylinder reservoir tank continues for 30 sec. or more when vehicle stops, or for 60 sec. or more when driving. 2. With ECU terminal IG1 voltage is 9.5 V to 17.2 V and open circuit for the brake fluid level warning switch circuit continues for 2 sec. or more.	<ul style="list-style-type: none"> • Brake fluid level • Brake fluid level warning switch • Brake fluid level warning switch circuit • Skid control ECU

WIRING DIAGRAM

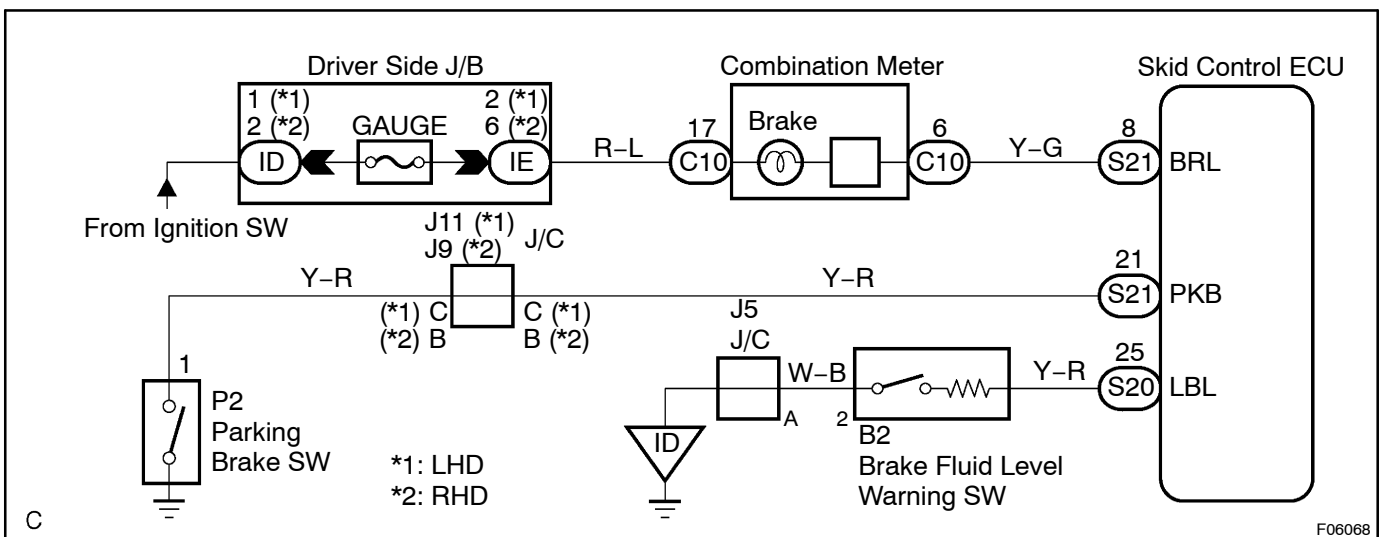

INSPECTION PROCEDURE

1	Check brake fluid level.
----------	---------------------------------

CHECK:

Check the amount of fluid in the brake reservoir.

NG

Check and repair brake fluid leakage and add fluid.

OK

2 Check brake fluid level warning switch.

NG

Replace brake fluid level warning switch.

OK

3 Check for open circuit in all the harness and components connected to brake fluid level warning light (See page IN-34).

NG

Repair or replace harness or connector.

OK

Check and replace skid control ECU.