

<b>DTC</b>	<b>C1223/43</b>	<b>ABS Control System Malfunction</b>
------------	-----------------	---------------------------------------

## CIRCUIT DESCRIPTION

DTC No.	DTC Detecting Condition	Trouble Area
C1223/43	ABS control system is abnormal.	• ABS control system

## INSPECTION PROCEDURE

1	Check the DTC for the ABS (See page DI-318).
---	--

\*1

Repair ABS control system according to the code output.

\*2

Check for ECU connected to malfunction indicator lamp.

\*1: Output NG code

\*2: Malfunction indicator lamp remains ON