

3 Is DTC output for ABS?

Check DTC on [page DI-318](#).

YES

Repair circuit indicated by the output code.

NO

4 Check the brake warning light.

See combination meter troubleshooting.

NG

Repair or replace combination meter.

OK

Check and replace skid control ECU.